NEW PERSPECTIVES ON SCANDINAVIAN DESIGN

IN SITU MODULAR SOFA — ASSEMBLY

— Anderssen & Voll

With the In Situ Modular Sofa, you can choose between 30 predesigned configurations or create your own aconfiguration.
Scan the QR code to find specific assembly guides for all predesigned configurations.

MUUTO


ASSEMBLY INSTRUCTION

Straight Frame Section Assembly ____ 1
Straight Frame Section to Module ____ 2
Straight Frame Section to Multiple Modules ____ 3
Lower Linking Bracket on Straight Configuration ____ 4
Upper Linking Bracket on Straight Configuration ____ 5
Straight Configuration to Straight Configuration ____ 6


Corner Frame Section Assembly ____ 7
Corner Frame Section to Module ____ 8
Lower Linking Bracket on Corner Configuration ____ 9
Upper Linking Bracket on Corner Configuration ____ 10–11
Corner Configuration to Corner Configuration ____ 12
Extra leg for 3-seater only ____ 13

1 STRAIGHT FRAME SECTION ASSEMBLY

CONTENT

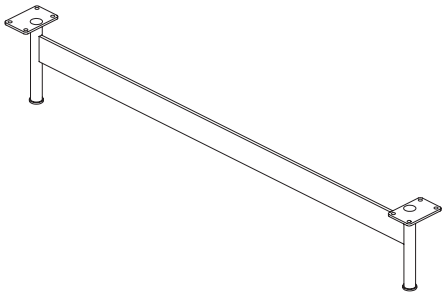

Leg
(Always 2 of same length).
Size and amount depends on
frame section/configuration

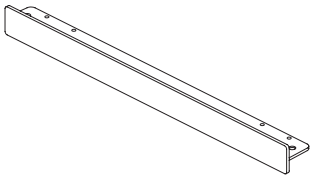

Bar
(Always 2 of same length).
Size and amount depends on
frame section/configuration



Screw 1
16 pcs. per
frame section


Flat countersunk
head screw M5x8




Screw 2
4 pcs. per module


Flat countersunk
head screw M8x60


With screw 1, fasten legs to bars
as illustrated.

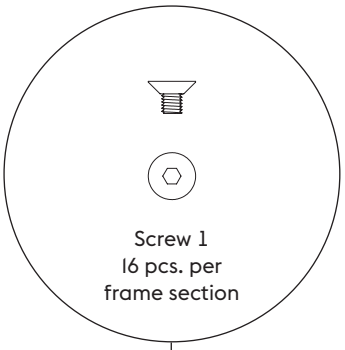


Screw 1
16 pcs. per
frame section

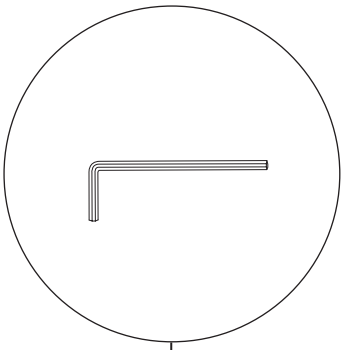

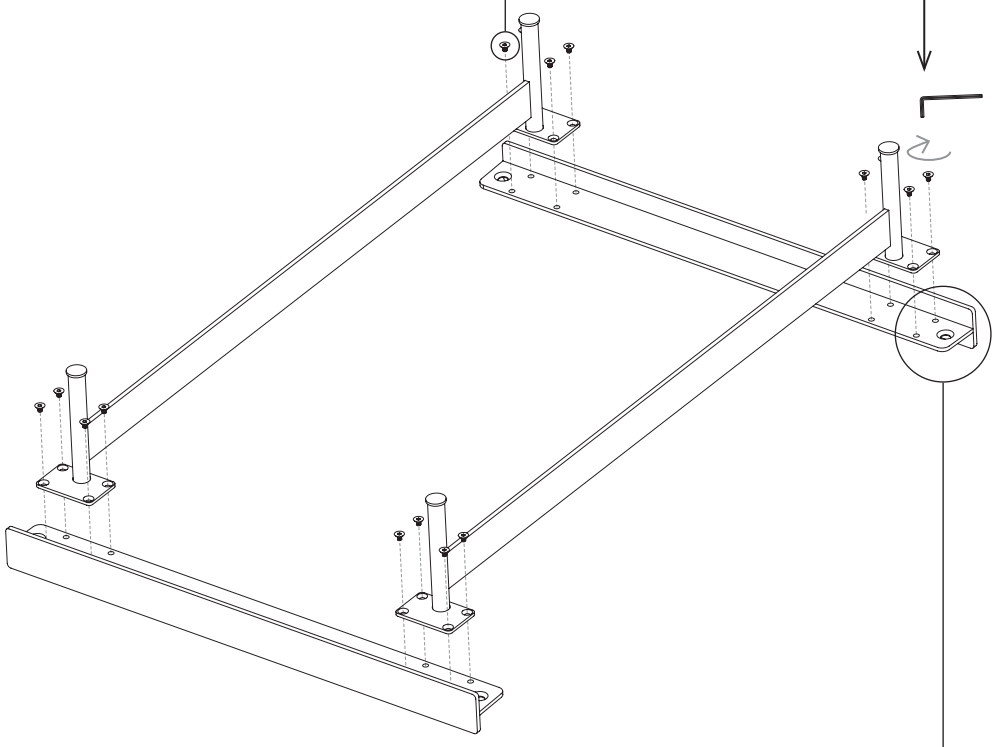

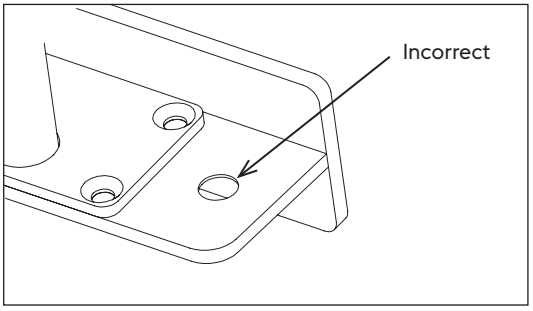


Incorrect

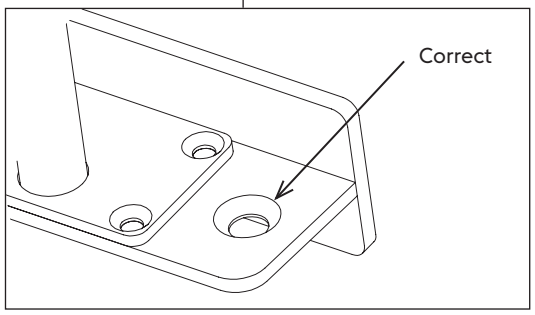

Correct

2 STRAIGHT FRAME SECTION TO MODULE

With screw 2, attach the whole frame section to the individual module as illustrated.

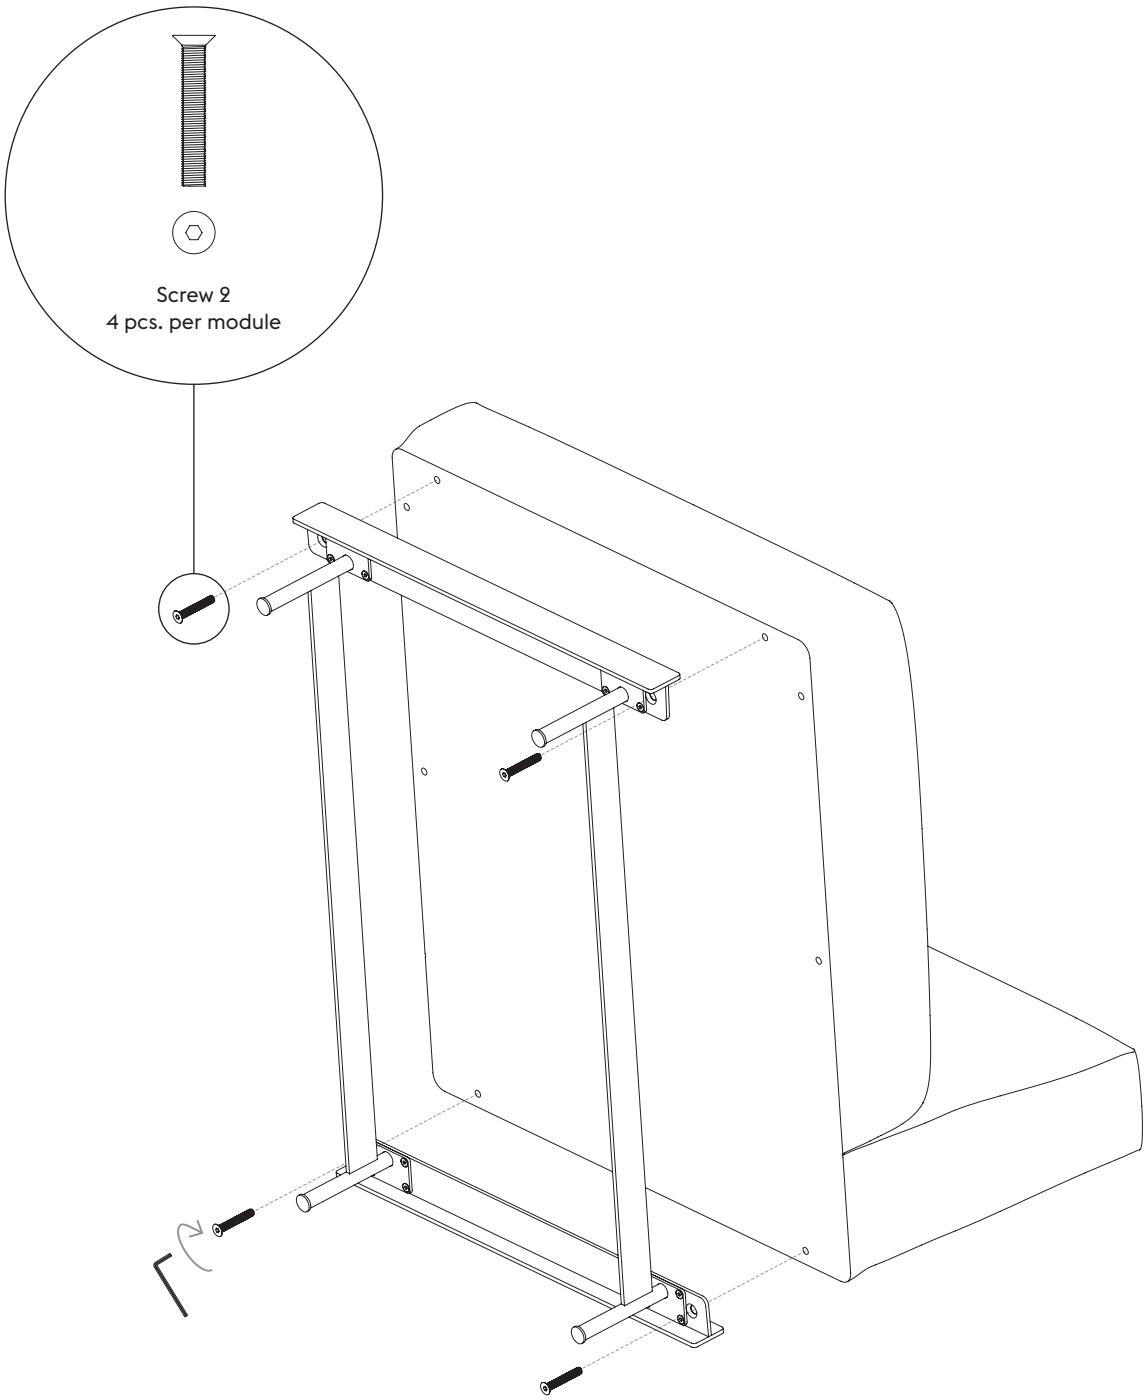


3 STRAIGHT FRAME SECTION TO MULTIPLE MODULES

Starting from one side/end of the frame section attach the individual modules loosely, witout leaving any gap in between as illustrated using screw 2.


When all modules are attached, secure the modules by tightening the screws. Each Module is fastened with 4 screws and some holes in bars might not be used.

Number of modules and screws depend on the configuration. Hole pattern in bars depends on the order of chosen modules.

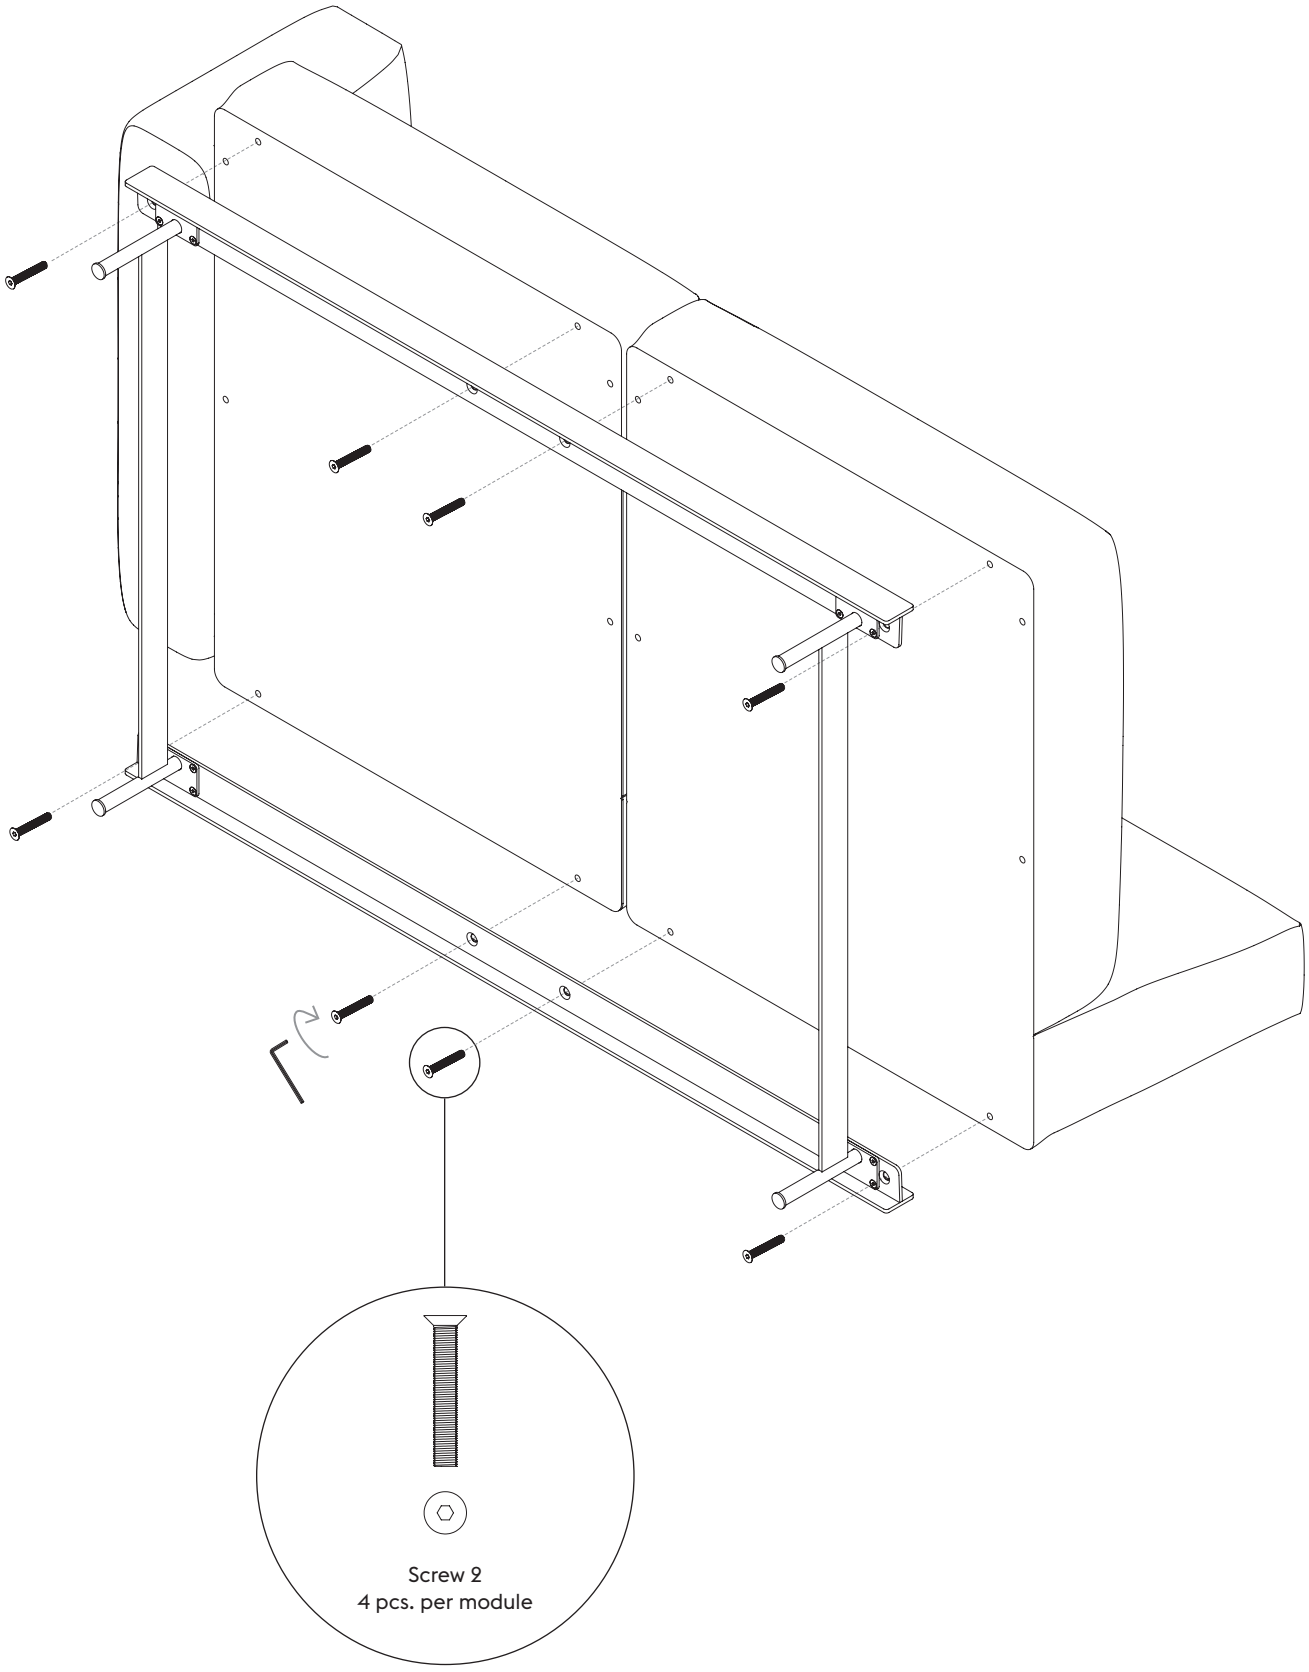

LOWER LINKING BRACKET ON STRAIGHT CONFIGURATION

CONTENT

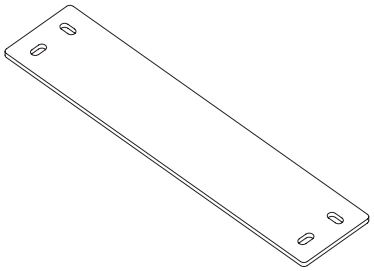

Lower
linking bracket
1 pcs. per kit



Upper
linking brackets
2 pcs. per kit




Screw 1
4 pcs. per kit.



Screw 2
4 pcs. per kit.

Use screw 1 x 2 to attach the lower linking bracket as illustrated to one fully assembled section.


NOTE — The smallest section, or the section with the fewest modules, should always have the the lower linking brackets attached first.

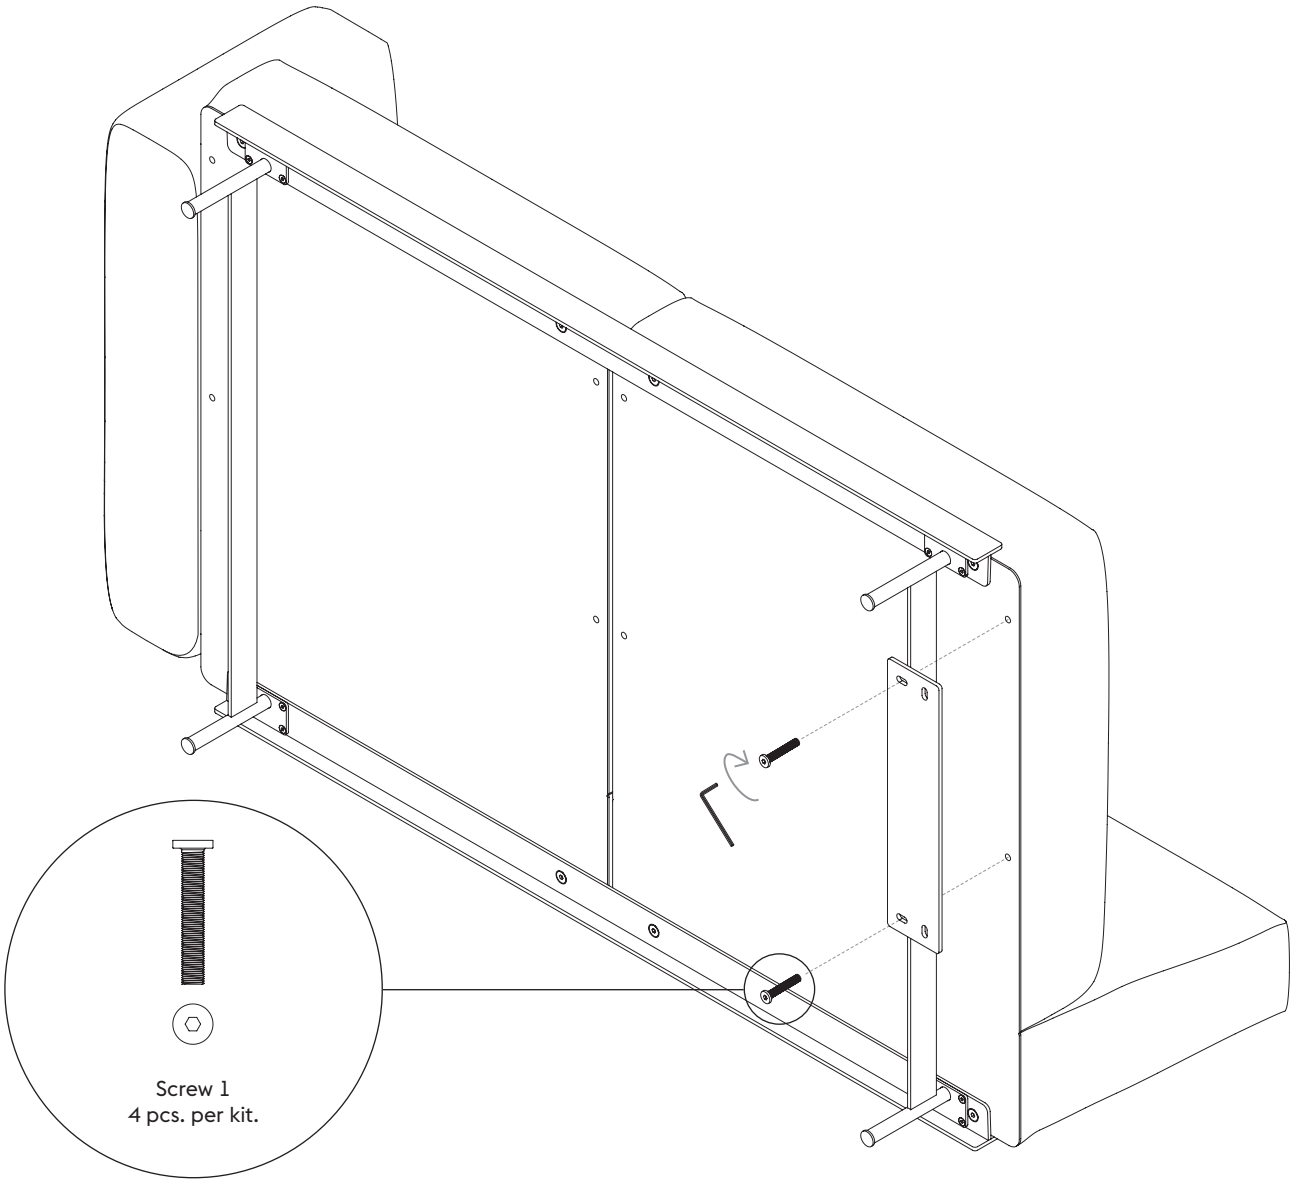

5 UPPER LINKING BRACKET
ON STRAIGHT CONFIGURATION


With screw 2, attach the upper linking brackets as shown. Make sure to always face one up and one down.


NOTE — The smallest section/the section with the fewest modules, should always have the upper linking bracket facing upwards.

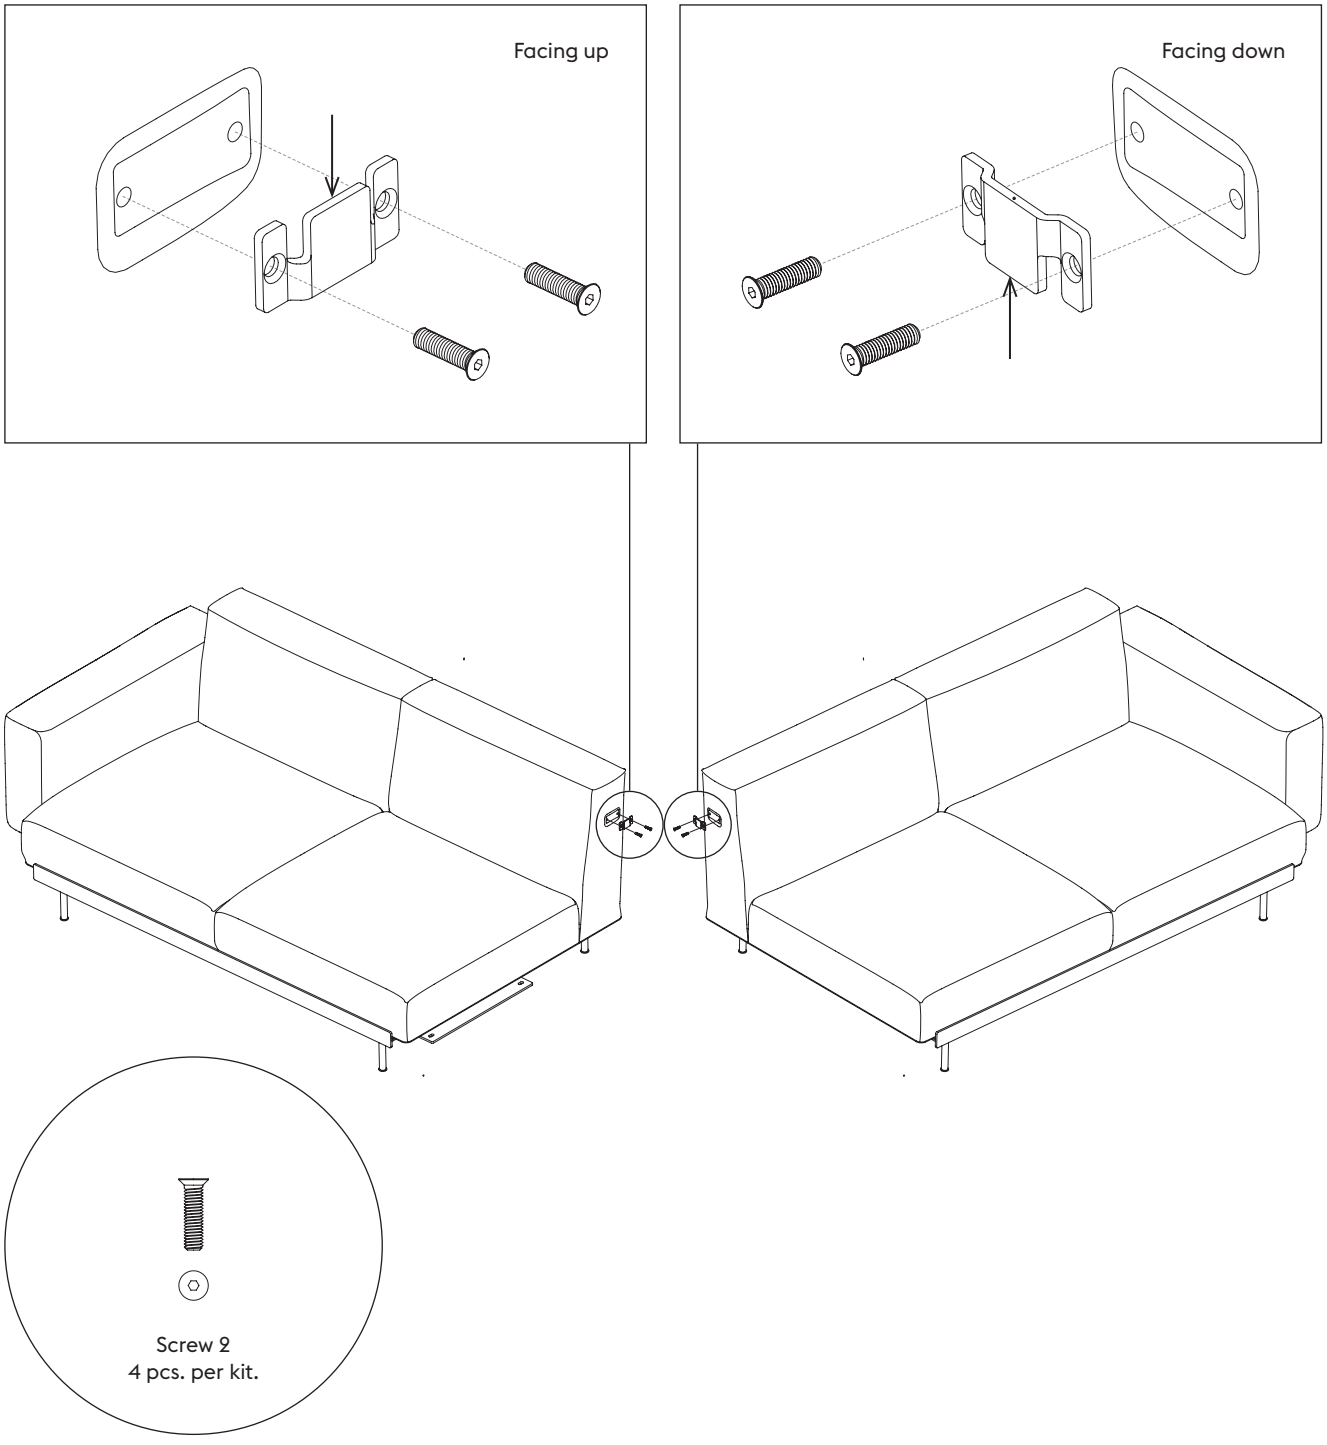


6 STRAIGHT CONFIGURATION
TO STRAIGHT CONFIGURATION


Link the upper brackets as shown, and secure the lower linking brackets with the remaining screws 1 x 2 underneath.

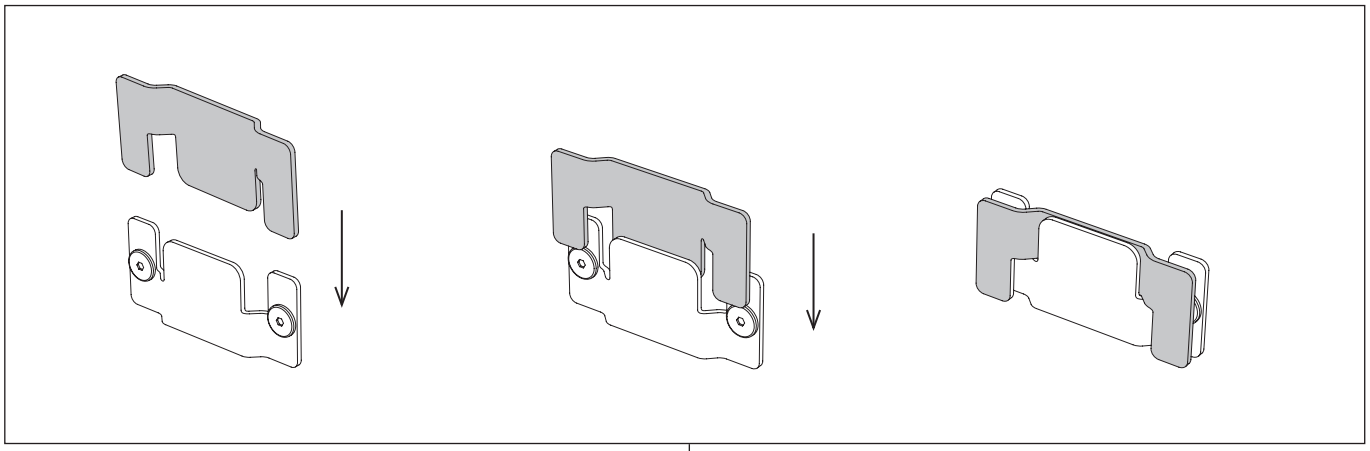

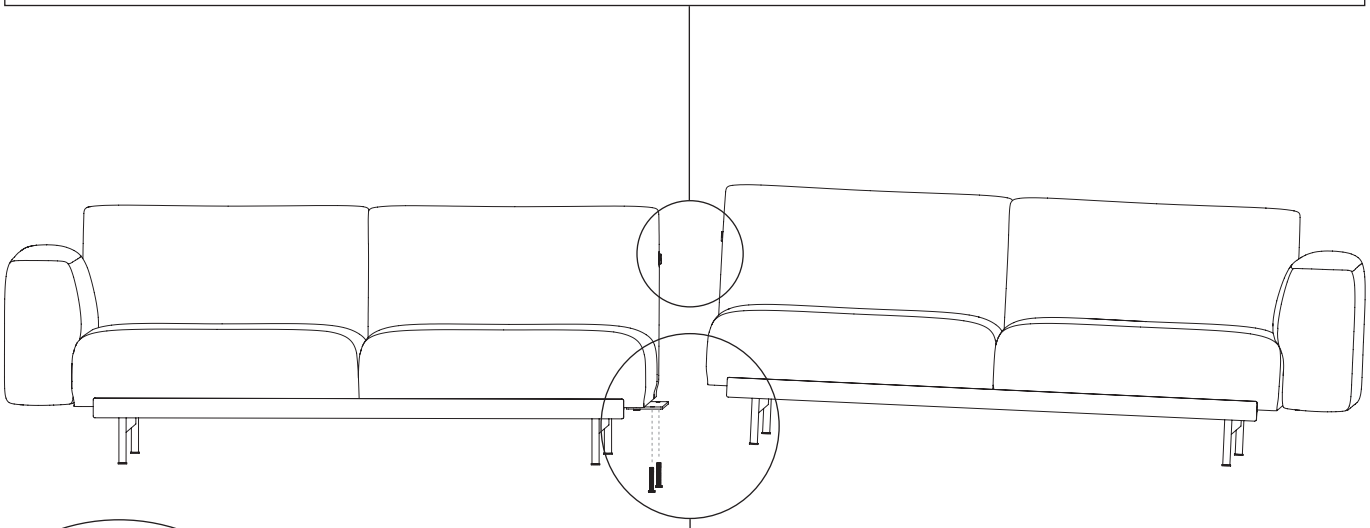

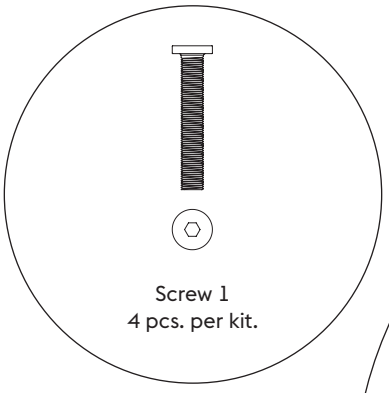


Screw 1
4 pcs. per kit.

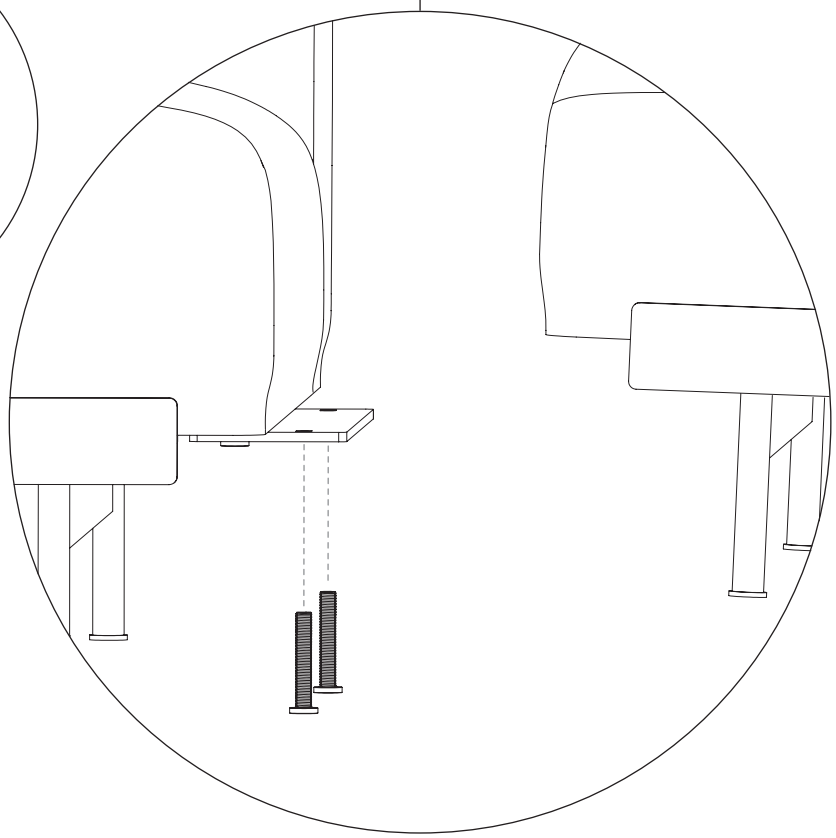

CONTENT



Single leg
4 pcs. per corner configuration

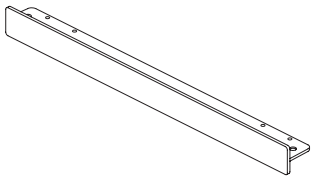


Bar
(Always 2 of same lenght).
2 pcs. per corner frame section



Screw 1
16 pcs. per corner frame section


Flat countersunk head screw M5x8



Screw 2
4 pcs. per module


Flat countersunk head screw M8x60

With screw 1, fasten legs to bars as illustrated.

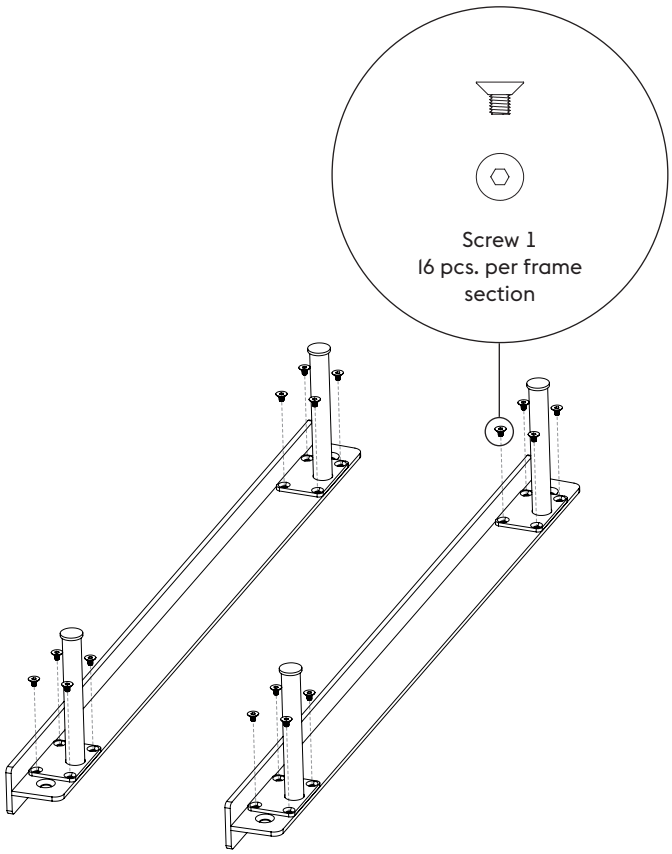


8 CORNER FRAME SECTION TO MODULE

With screw 2, attach the whole frame section to the induvidual module as illustrated.

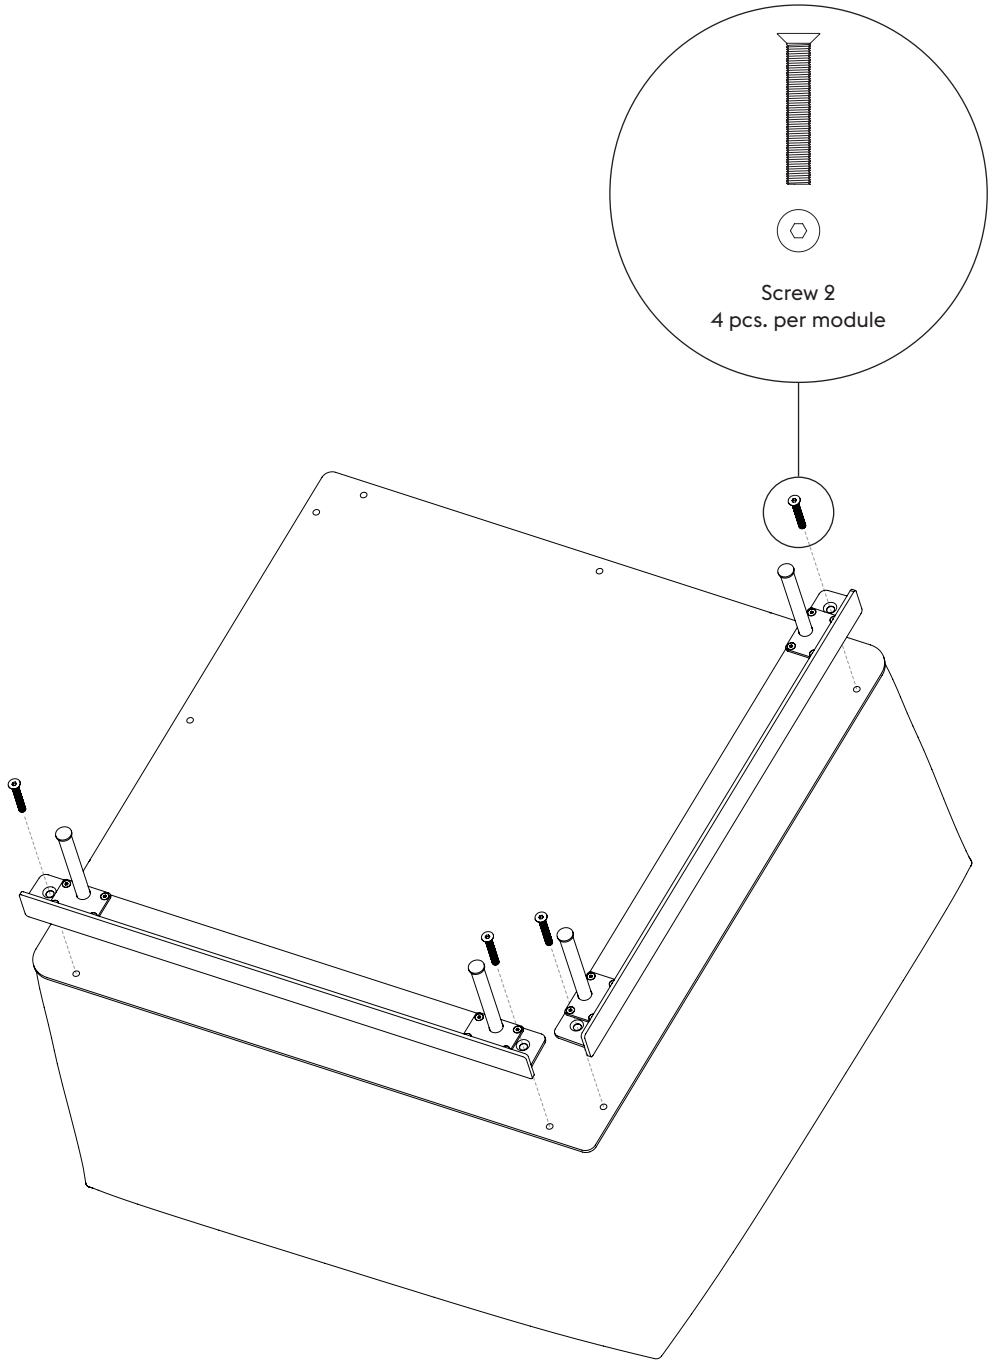

LOWER LINKING BRACKET ON CORNER CONFIGURATION

CONTENT

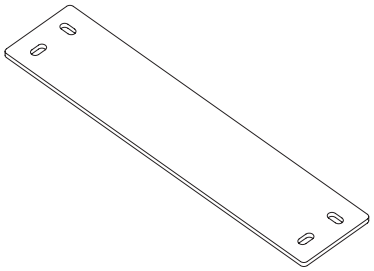

Lower
linking bracket
1 pcs. per kit



Upper
linking brackets
2 pcs. per kit




Screw 1
4 pcs. per kit.



Screw 2
4 pcs. per kit.

Use screw 1 x 2 to attach the lower linking bracket as illustrated to one fully assembled section.


NOTE — When assembly a corner configuration, the Lower Linking bracket must always be mounted on the adjacent configuration.

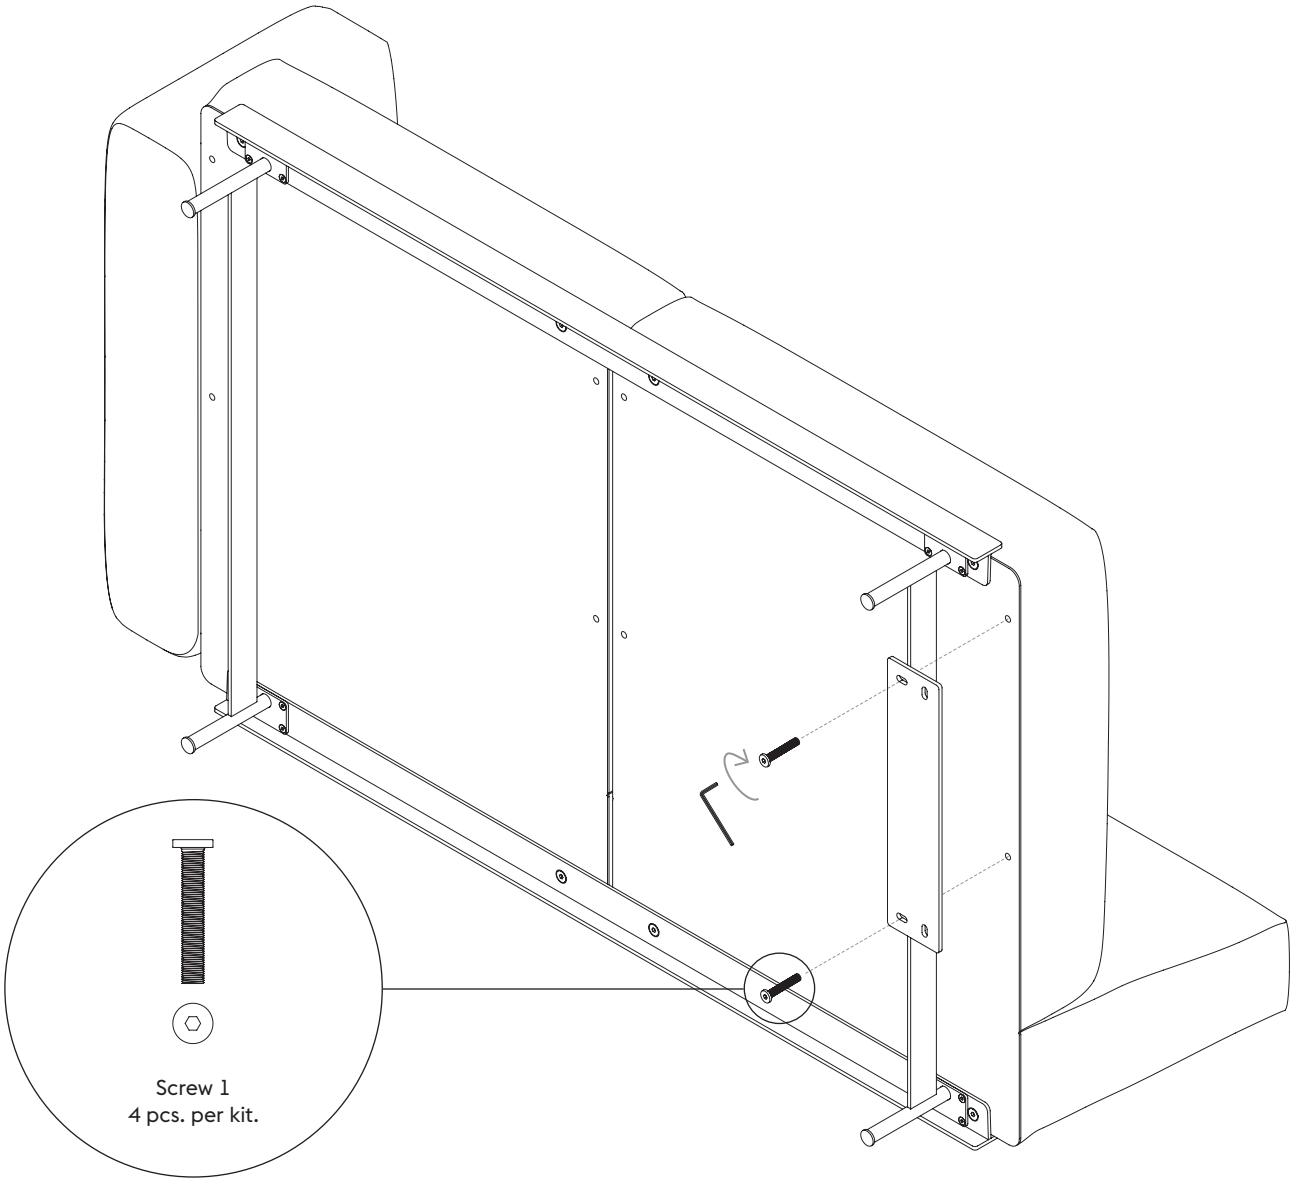


10 UPPER LINKING BRACKETS
ON CORNER CONFIGURATION

With screw 2, attach the upper linking brackets as shown. Make sure to face both brackets upwards.


NOTE — When assembling a corner configuration, the Upper Linking brackets on the adjacent configurations must always be mounted facing upwards.

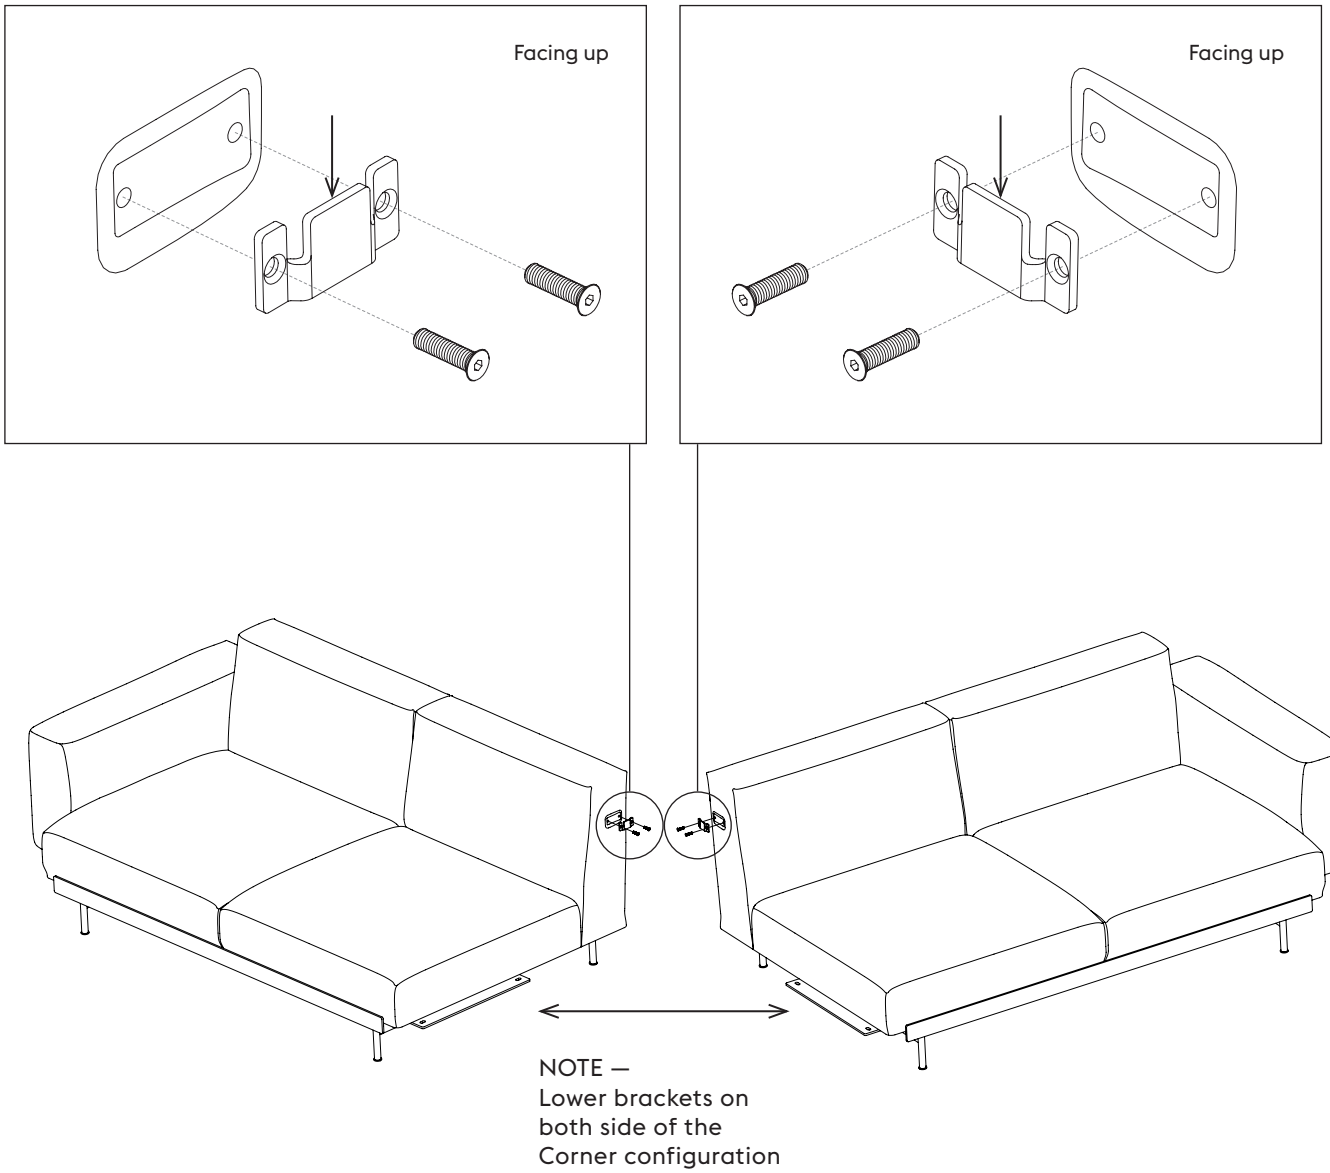


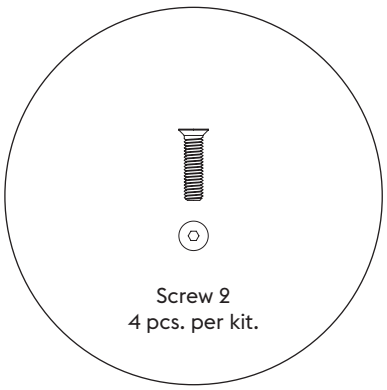

11 With screw 2, attach the upper linking brackets as shown. Make sure to have both sides facing down.

NOTE — When assembling a corner configuration, the Upper Linking brackets on both sides of the Corner configuration must always be mounted facing downwards.

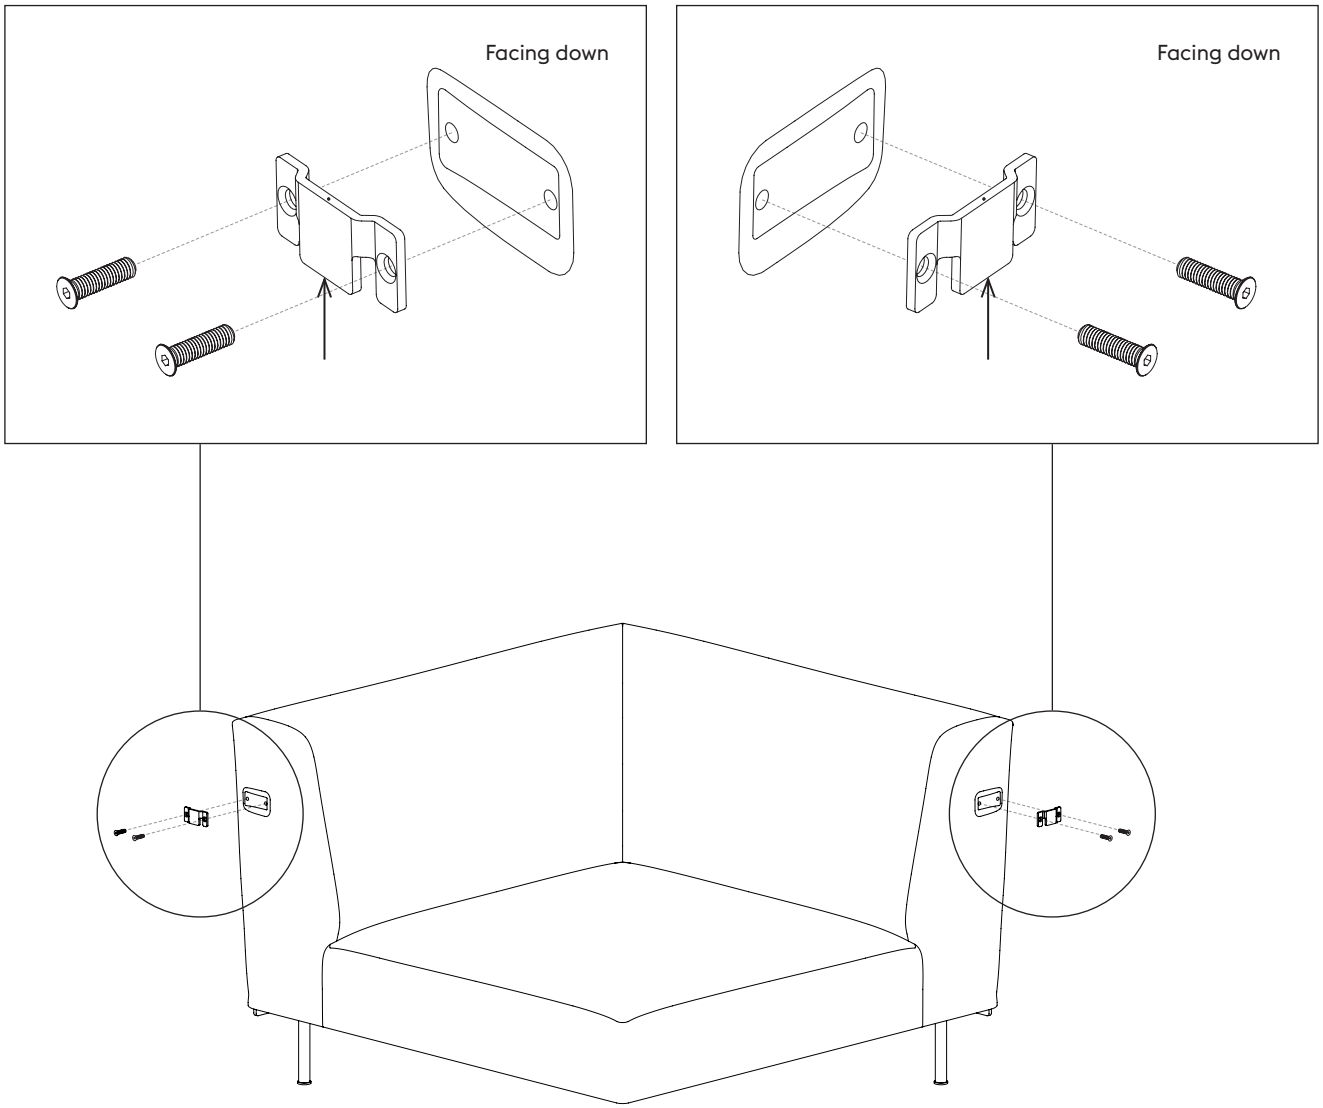


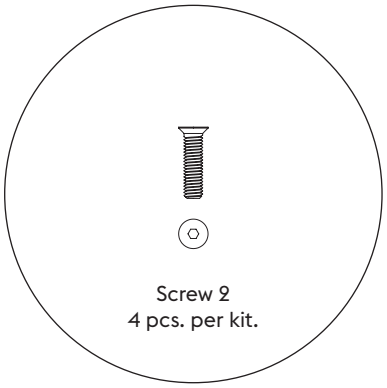



Screw 2
4 pcs. per kit.


12 CORNER CONFIGURATION
TO CORNER CONFIGURATION

Link the upper brackets as shown, and secure the lower linking brackets with the remaining screws 1 x 4 underneath.

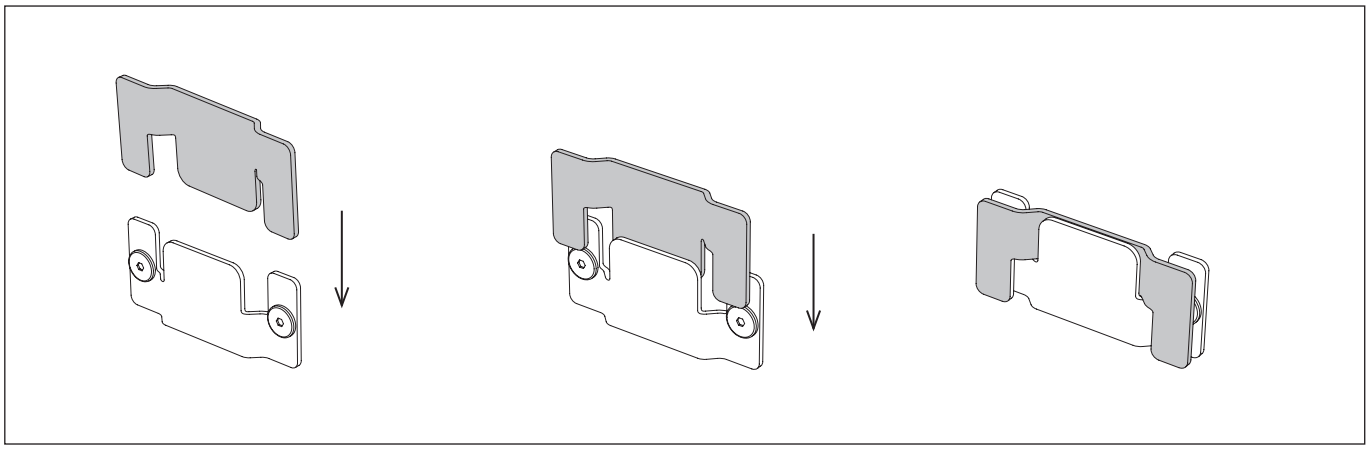


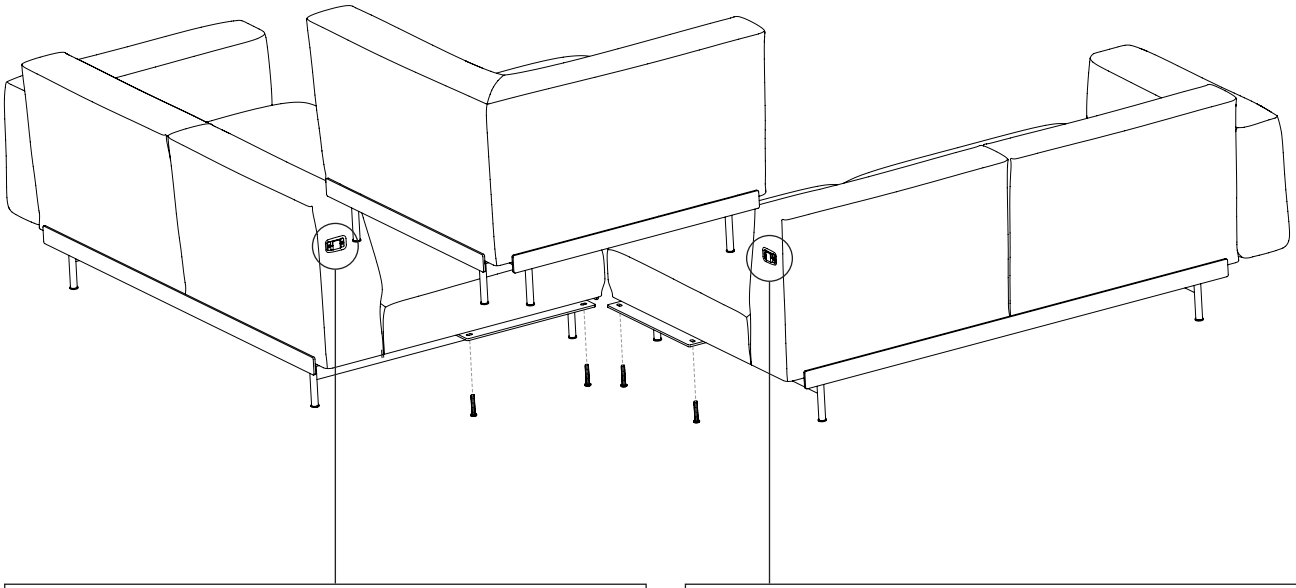

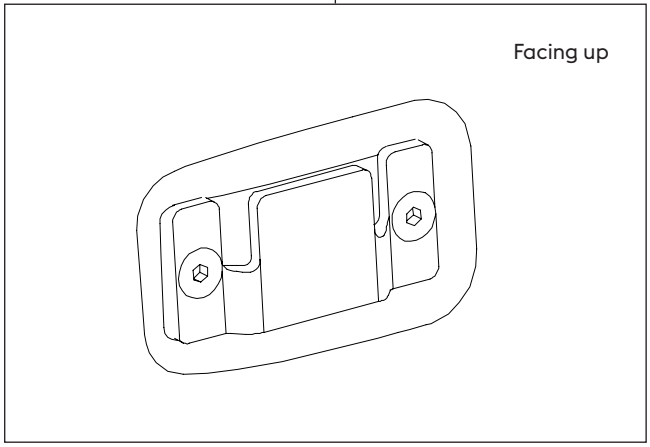

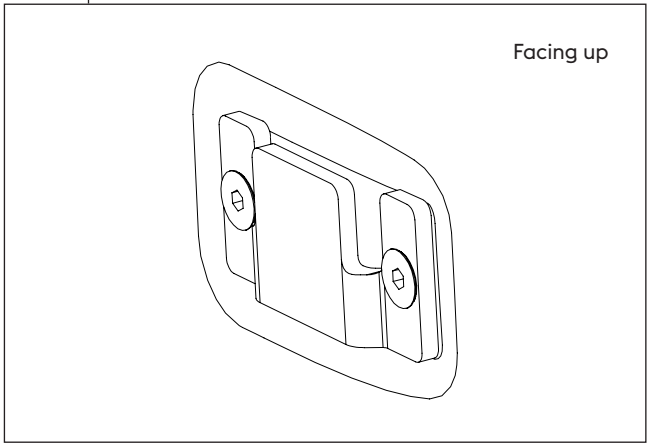


CONTENT




Extra leg
2 pcs. per 3-seater
configuration




Screw 1
4 pcs. per kit.

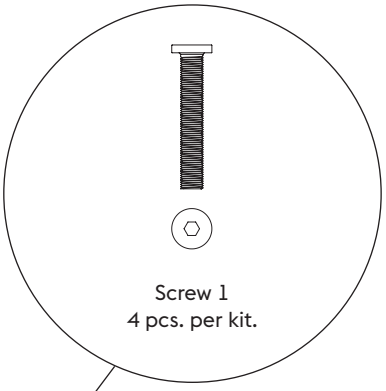

Screw 1
4 pcs. per kit.

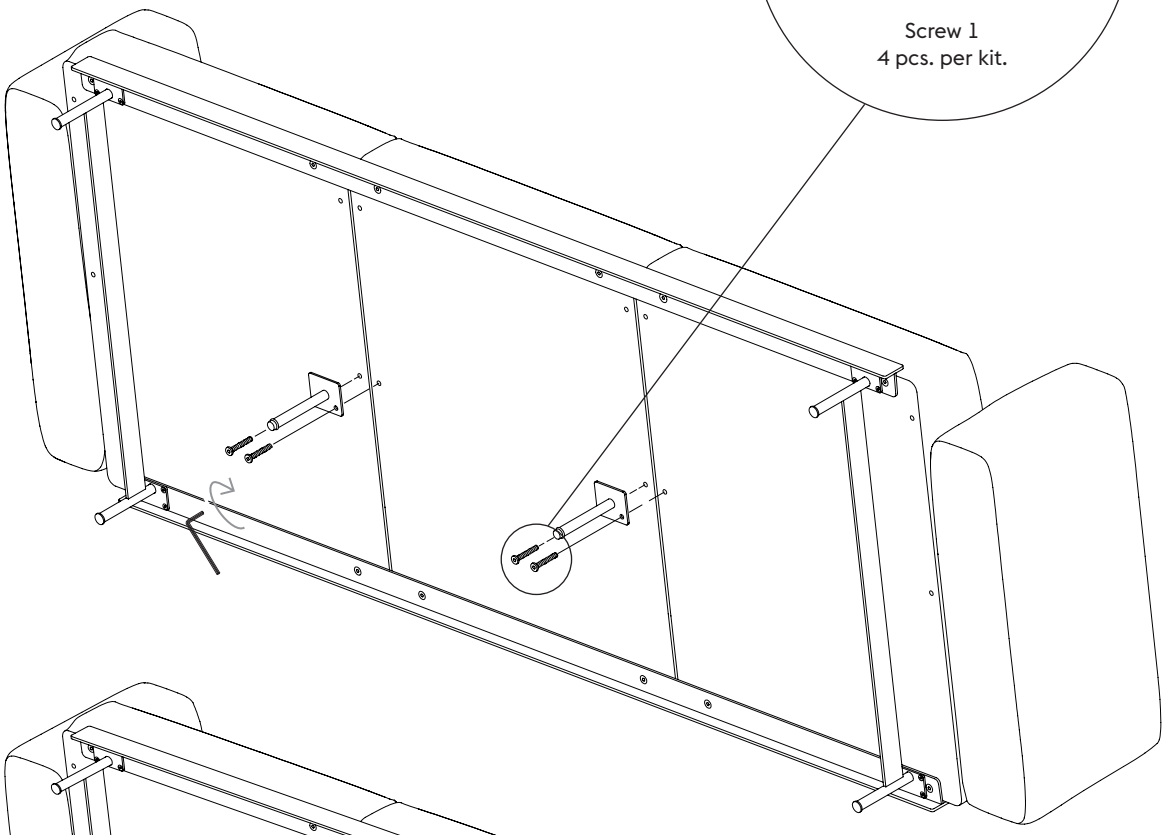

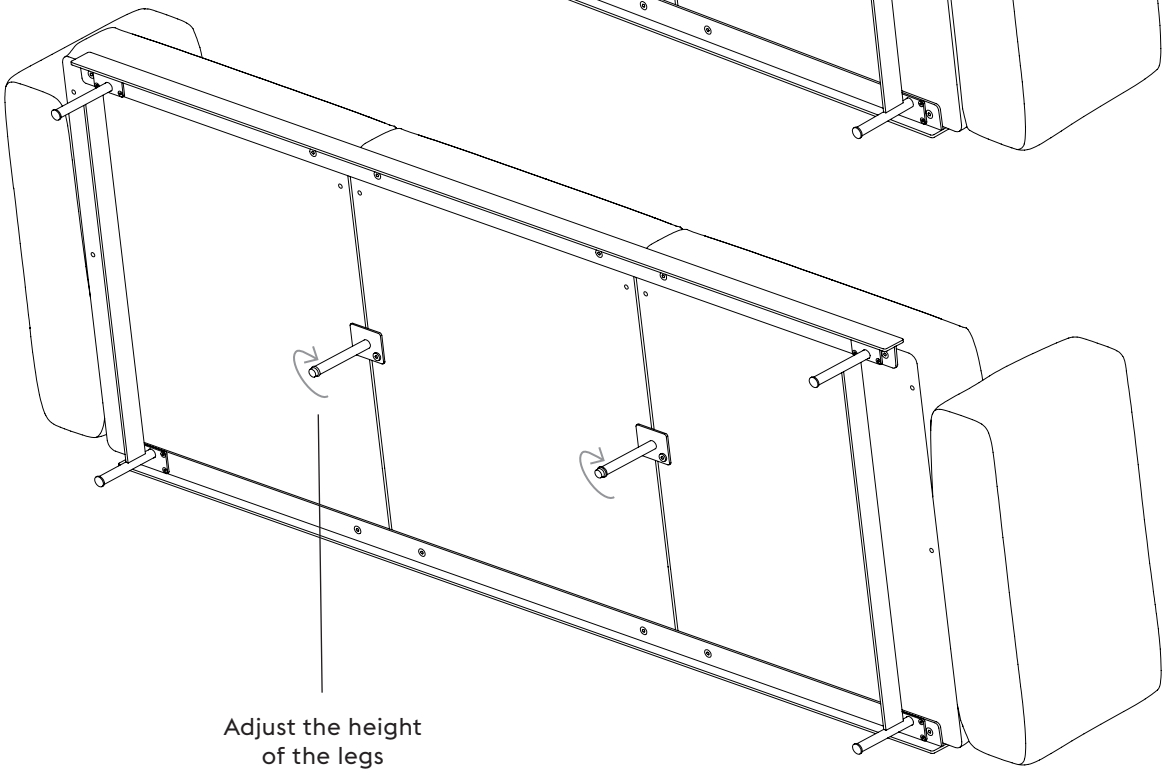

Adjust the height
of the legs

CLEANING — RENGØRING — SÄUBERN — NETTOYAGE — LIMPIEZA

EN To remove stains from a textile-upholstered sofa, use foam from a mild mixture of water and detergent.

DK Brug skummet fra en mild blanding af vand og opvaskemiddel til at fjerne pletter på en tekstil polstret sofa.

DE Zum Entfernen von Flecken auf gepolsterten Sofas verwenden Sie den Schaum aus einer Wasser-Spülmittel-Mischung.

FR Pour retirer les tâches du textile sur les canapés, utilisez de la mousse depuis un mélange d'eau douce et du détergent.

ES Para eliminar las manchas del tapizado textil de los sofás, utilice una solución de agua jabo-nosa neutra.

MUUTO HEAD OFFICE
ØSTERGADE 36-38, DK-1100
COPENHAGEN, DENMARK

FOR MORE INFORMATION
VISIT MUUTO.COM